



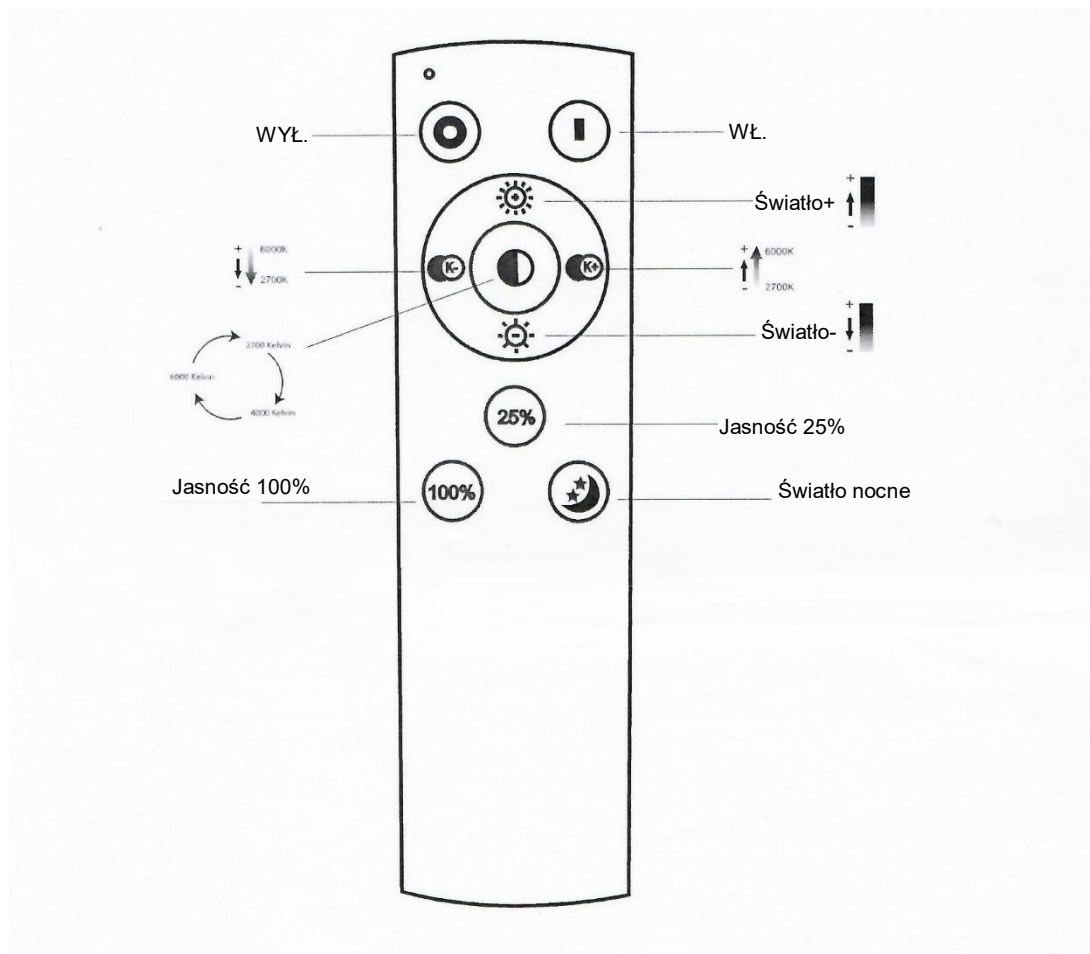
Remote Controller Instructions:

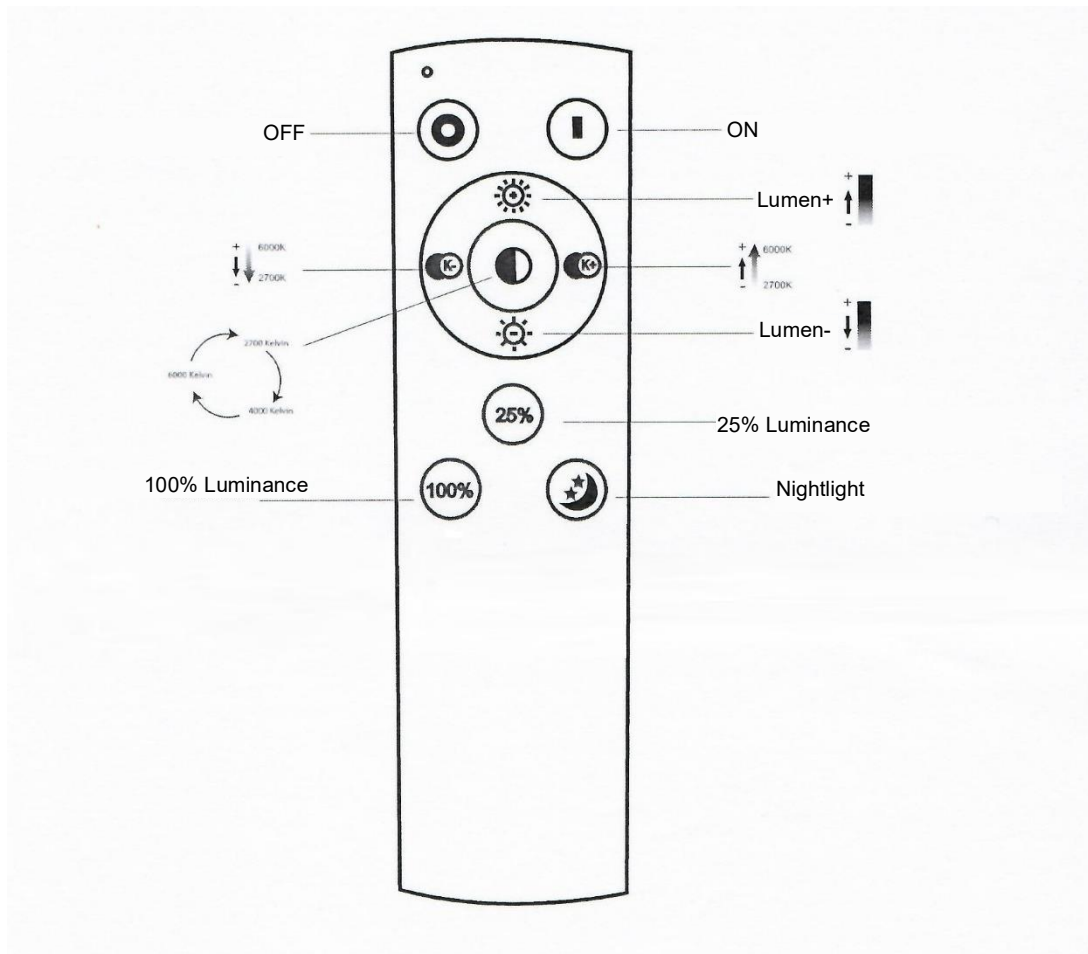


Connecting to the remote control:

1. First, switch on the power supply using the wall switch. Then press and hold the  "ON" button on the remote control for at least 3 seconds. The lamp will flash, indicating that it is paired.
2. If pairing is unsuccessful, turn off the power supply for 15 seconds and repeat the procedure.
3. To reset the pairing (clean the code), switch the power supply on and off five times. The lamp will flash. Then turn off the power supply for 15 seconds and repeat step 1.
4. Only one lamp can be connected to one remote control.

Instrukcja obsługi pilota



Połączenie z pilotem:

1. Najpierw włącz zasilanie przyciskiem ściennym. Potem naciśnij na pilocie i przytrzymaj przycisk  „WŁ.” przez przynajmniej 3 sekundy. Światło zamiga, co oznacza, że lampa została sparowana.
2. Jeśli to się nie uda, wyłącz zasilanie na 15 sek. i powtórz proces.
3. Aby wyczyścić kod, włącz i wyłącz zasilanie 5 razy, a światło zacznie migać. Następnie wyłącz zasilanie po 15 sek. i powtórz krok 1.
4. Tylko jedna lampa może być połączona z jednym pilotem.